 


Layout and Function

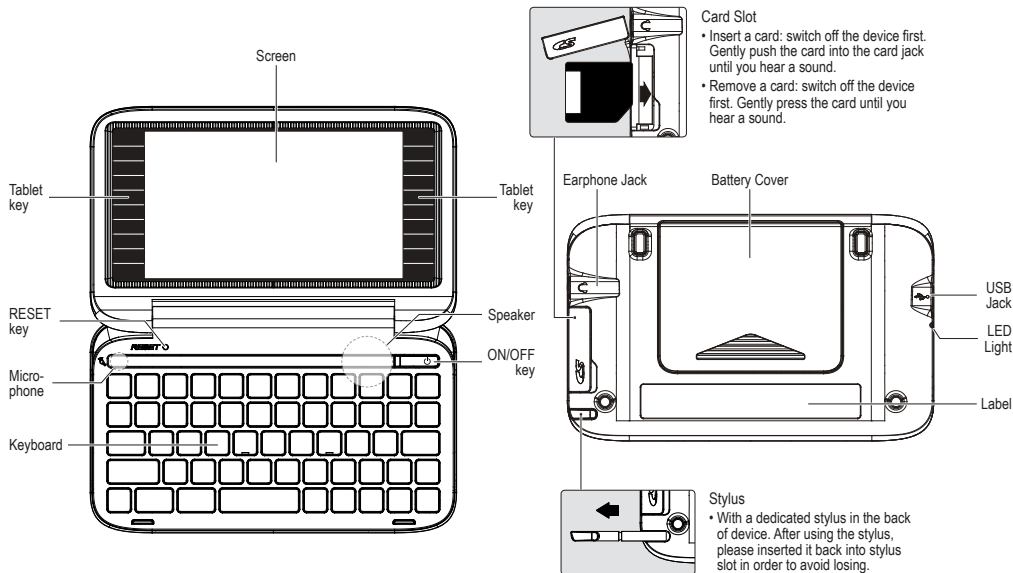

First Use

 
Please recharge battery when using the device for the first time.

1 Inserting Battery: Remove the battery cover, insert the battery into the compartment and then close the cover securely.

- Please insert the positive and negative pole of battery into the right place, press the battery gently and at last close the battery cover securely.

2 Connect the device properly with Adaptor or USB. When the LED is red, the device is charging.

- The device allows charging with Adaptor or USB.

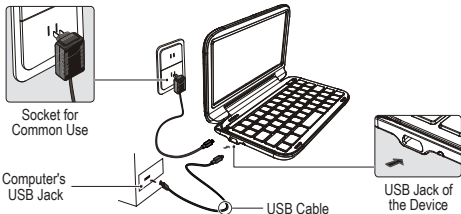



3 When the LED's red light turns into green, the device is fully charged.

- It takes about five hours to fully charge the device. (The time would be influenced by different situations such as weather, humidity and so on.)

4 Detach the adaptor from the USB jack and adaptor socket.

5 Press On/Off Key

  - Wait for a moment, the panel will show you tips to the following step.

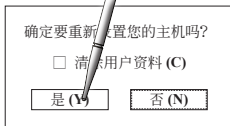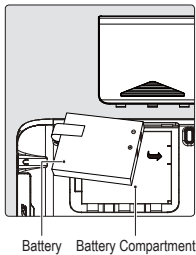

6 Choose what you want, and then tap the panel with stylus.

7 Set up the local city, date and time of the device.

- Tap local city, date and time separately and edit them.

Set up the local city: Input the first letter or preceding letters of the city's English name and choose the right city in the column. Tap the city's name twice for confirmation.

Set up the date: In the calendar, tap left/right keys to choose the right year and then tap once on the right date and day. Finally, tap [完成] for confirmation.

Set up the time: Tap the up/down keys to set up the right hours, minutes and am/pm. Finally, tap [完成] for confirmation.



8 After all confirmations, please tap [X].

- After a short animation, you will enter the main menu.



Battery usage

- The battery is rechargeable and can be used many times until damage. When the battery is fully charged, but the using time is very short, it should be replaced.
- Please use the battery of the same type of the original one. It may explode if you use the unidentified battery.
- Please don't discard the used battery, it should be recycled according to the law of the local government.

RESET

- After reset the device, please repeat the steps from the 5th step to the 8th.

Main Menu

The main menu's titles are the beginning of all functions and applications.

1 Press **[Menu]** and then you could flip into the main menu.

- The **[Menu]** will lead you into the main menu whenever you use any functions.

2 In the main menu, press **[Menu]** and then choose functions.

- The choosing item is showing highlight.
- In the main menu, press **[Shift]** and then press **[Menu]** to switch the language.
- In the main menu, press **[繁體]** to switch the Chinese character between traditional and simplified.



Functions

Title of Main Menus

Accelerator Keys for Search Engine

3 Press the direction keys (**[▶]**, **[◀]**, **[▼]**, **[▲]**) to choose the functions and then press **[Enter]**; you could also choose the functions according the numeric keys (press **[1]**~**[0]** and **[I]**, **[II]**).

- You could also choose by tapping the "main menu's title" or "functions" with the stylus.
- There are accelerator keys of some important functions on touch panel, you could enter these functions by tapping them.

Accelerator Keys for Search Engine

Search some key words, phrases, example sentences or the whole

data in the device's all dictionaries.

1 After tapping **[EN]** with stylus, you would enter the input menu to choose the input method.

- Press **[▶]** or **[◀]** to unfold or fold the input menu.
- In the input menu, press **[☑]** or **[☒]** to find more input methods.

2 Input the key words (For example: input "kid").

- Key words "kid" would show in the edit box where the cursor would flicker.

3 Choose a searching way that you want. Tap the single-selection that you choose with stylus, such as "e.g."



4 After the confirmation, tap **[Q]**.

- Wait for a moment, and the searching result will be shown on the screen.

Please refer to the part "Word-inputting".

Stylus Operation

This device provides touch-operation. It includes the following ways:

- **Selection-tapping:** Choose the function on the screen and tap it gently with the stylus. Make sure the stylus leave the screen after tapping.
- **Double-tapping:** Tap twice on the same function.
- **Dragging:** Dragging the stylus without its tip leaving the screen. (Do not drag heavily!)
For example, dragging the words on the screen of data-browsing, text-edit etc.
- **Writing:** The operation of hand-writing input would be described at the latter part.

Word-inputting

Our device provides many kinds of input methods including keyboard, soft keyboard and handwriting recognition input. By these methods, you could input symbol, number, English, Chinese Symbol, Chinese Pinyin, Korean, Japanese phonetic symbol, internal code, Spanish, German etc.

Change the Input Method

1 On the edit conditions, (such as on Dictionary Index, Text Editor, etc.) press **输入法**. The input method's menu would show on the screen.

2 Press **▼** or **▲** to choose input method.

- Press **▶** or **◀** to unfold or fold the input menu.
- Press **☺** or **☹** to find more input methods.

3 If your selection is on the standby condition, you could press **Enter** for confirmation.

- There are some color printing functions on the keyboard. They need collocate with **Shift**.
✚ For example, press **Shift** then press **Space** = **输入法**
- Tap **👉** to fast open the soft keyboard; tap **👈** to fast open handwriting recognition input; press **符号** to fast open symbol input.
- Press **Shift** during the English input, the letter which you input would be a capital letter once; press **Caps** would shift into the capital input.
- In English input mode, press **Shift** and Number Key **1** ~ **11** input symbol: ! @ # \$ % ? , * () - . ; In Chinese input mode corresponding input symbol: ! @ # \$ % ? , * () - .

Commonly Used Keyboard Input

Smart Pinyin

- Press alphabet keys to input the smart pinyin.
✚ For example, inputting "WM", you could get "我们，外面，文明..."
- Press **▶** or **◀** to look up more Chinese phrases.
- Press numeric keys to input the standby Chinese phrase that you want.

Chinese Pinyin

- Press alphabet keys to input the integrated pinyin of Chinese character.
- Press **1** ~ **5** to input the symbols of tones. (High and level tone, rising tone, falling

rising tone, falling tone and light pronunciation)

- Press **▶** or **◀** to look up more Chinese character; Press **▼** or **▲** to change the symbols of tones.
- Press numeric keys to input the standby Chinese character you want.

Radical Strokes

 
 
- Press **☺** or **☹** to choose the number of Chinese character's radical strokes.
- Press **Space** to confirm the radical that you choose.
- Press **☺** or **☹** to choose the rest stokes of Chinese character.
- Press **Space** to input the character that you need.

Symbol

- Press **▶** or **◀** to look up more standby symbols.
- Press numeric keys to input the standby symbols that you need.

Soft Keyboard Input


On the touch panel, tap the soft keyboard to input. Some keys' function are the same as the real keyboard's. (Such as the **Shift**, **Space** ETC.) The following shows the special keys on the soft keyboard.

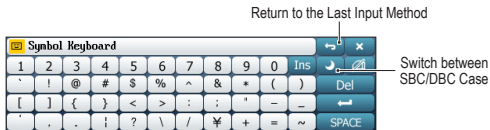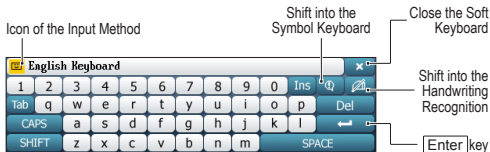


Handwriting Recognition Input

Chinese/English/Japanese/Korea input is available in the handwriting recognition. There are multi-box/single box/full screen for handwriting.

 Full Screen Handwriting (for chinese)
You could switch the single/multi character recognition.




Standby for Association

 





 





Multi-box Handwriting (for chinese)
You could write the single character on each handwriting box.

Single Box Handwriting (for chinese)
You could switch the single/multi character recognition.



 
Instruction for Keys

-  numeric keys
-  tap to choose the language
-  the soft keyboard of the same language
-  shift into the symbol keyboard
-  [Space] key, input the space
-  [Enter] key, confirm operator/shift line
-  [Del] key, delete the cursor's right & left character or select the string of characters
-  switch the multi/single character pattern
-  switch multi box /single box for handwriting
-  switch single box/full screen for handwriting

Input Method

Write in the handwriting area with stylus⇨Wait the recognition after stopping writing⇨ Tap the standby for recognition or association (Chinese handwriting only).

For example: Input "李清照" at Text Editor function.

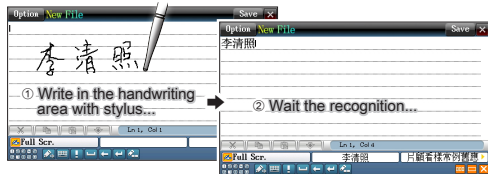

Inputting with handwriting, if you want to increase the input speed, please switch to the multi character pattern. By this pattern, you could write multi words continuously. If you want to increase the accuracy of recognition, please switch to the single character pattern. By this pattern, you could only write one word at one time.

Word Searching

Take Oxford Advanced Learner's Dictionary as an example to illustrate the method of searching a word.

Searching Method

- If you know clearly the word's spelling, you could just input the word and press [Enter] for confirmation. This is called Accurate Search.
- If you know the past tense/past participle of a verb, you could get the original verb. This is called Original Search. (For example: If you input "walked", you would look up "walk")
- If you are not sure of a word's spelling, you could use Wildcard Search. Input all the letters you know, and then replace the unknown letters with "?" or "*". "?" stands for an unknown letter. "*" stands for a string of unknown letters. (For example: If you input "pron*n'tion", you would get "pronunciation")
- If the word you input is not found, the device provides other two ways to look up: ① Spelling Check (displays the list of words similar in spelling); ② The Nearest Word (displays the nearest word in order).
- If you want to search for the sentences/phrases/all text of a word in the database, please input this word and then press [Search].
- You could search the unfamiliar or phrases on the explanation screen. This is called Multi-layered Search. On the explanation screen, highlight the unknown words or phrases to be looked up. And press corresponding keys to search the results.

For Example, accurate Search for [good]: On the index screen of Oxford Advanced Learner's Dictionary, press [G], [O], [O], [D] and [Enter] in turn.



For Example, wildcard Search for [pron*c*tion]: Press the string of the word and then press [Enter].



For Example, multi-layered Search for [quality]. On the explanation screen of [good], highlight the [quality] with stylus, and tap [E-C].



Pronunciation

- If the explanation screen shows 真, you could tap the icon 真 to listen to the word's pronunciation.

- If you want to listen to the syllable pronunciation, press [音节] on the explanation screen.

- If you want to practice reading, press [正音] key and then according to the cue on the screen to read after device or have comparison.

- If you want to listen to the pronunciation of example sentence, press [朗读] on the example sentence screen.

- If you want to listen to the pronunciation of any words or sentences, please highlight them, and then press [发音] or [朗读] key.



 
Practice reading -- production

Search Engine

There are two other kinds of search for files on Search Engine besides the search for dictionaries.

Data: Input files' partial/full name to search the matching text file.

Multi: Input files' partial/full name to search the matching Video, Audio, Flash or Photo.

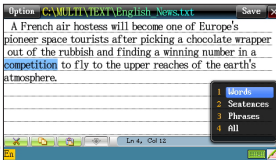

Search Engine -- Look up unknown word at any time

- Searching for data or multi files, if you want to find the same kind files at a time, you could use [*] to perform the wildcard search. (for example, search for [* .txt] you could find all text files. Search for [* .mp3] you could find all MP3 files.)
- On the data browsing screen, highlight the key word and then press [Search] key to look up this unknown word.

MP3

MP3 supports simultaneous conveyance of sound and lyrics, provides A-B record playing function. You could also close the MP3 screen when MP3 keep playing. You can listen the music and use the other functions of the device at the same time. (Such as: consult a dictionary, text editor, etc.) You can go back to [MULTI-MP3] to control MP3.

Instruction for Keys

↔: [Z]Key, To switch the language displaying in lyrics

LCD OFF: [G]key, To close the screen. Press [On/OFF] to show the screen

skin·lyric·list: [Y]key, To switch the play list/skin list/lyrics list. Tap to show two types skins of MP3 for users to select

→: [R]key, To enable / disable repeat mode

☐: [C]key, To select order of playing

☰: [L]key, To show the list of songs

⏮/⏭: [Q]/[F]key, To fast forward and fast reverse functions

▲/▼: [A]/[B]key, In repeat mode, to replay/finish replay from the current time

■: [S]key, To stop playing

⏮/⏭: [↑]/[↓]key, To select upward/downward

▶: [P]key, Play / pause, to play / pause song

▲: [U]key, Open file to select song

— · +: [I]/[O]key, To select lower / higher sound of the music



Common Used Functions

- You can find the music from the folder where the music is placed. First, choose the MP3 file that you want. Second, tap [Finish] for confirmation. If you want to go back the preceding menu, you can tap the accelerator key [↶].
- When you edit the MP3 play list, please tap [Load] then you can have a manual operation on opening the MP3 files. Tap [Auto Search], the device can auto search download data for MP3.
- In repeat mode, please open the function of repeat, and then you could set the beginning (A) and ending (B). This [▲/▼] would show you the length of repeat. If you want to stop repeating, you would just shut down this repeat mode.
- The function of simultaneous conveyance of music and lyrics can be realized only if the two files with the same name and suffix. Such as "牵手 . lrc" and "牵手 .mp3" are put into the same folder.

Device Settings

Time & Date	Our device's initialized time is 2088/08/08 8:08 am. If you want to change this setting, you can enter World Time and then choose [Set Time]
Volume & Brightness	<ul style="list-style-type: none">• You can tap [设定] on the tablet key to set up the volume, speed and brightness• You can set up the startup music, turning on/off pen and key tone etc. through Sound Setting
Startup Picture	You can change the startup picture in the Startup Picture setting
Language	Switch among multi kinds languages of menu displays such as Chinese, English, etc. through Menu & Language Setting
Auto Power Off	Our device's initialized auto power off time is "5 minutes later power off automatically". To change this setting, please open the Power Management
Input Method	If you want to enable/disable one kind of input method, you can set up in the Input Setting
Handwrite penup time	The initialized handwrite penup time is 0.6 seconds. You can set up in the Handwriting Setting
Touch Panel Calibration	You can adjust touch panel calibration in the Handwriting Setting
My Setting	My Setting allows to set colors for topic, dictionary and desktop. It also allows to select USB Auto Connection and Effect Control, please open the My Setting
My Favorite	According to user's favorite to set My Favorite, you can use My Favorite easily to get the functions which you need, please open the My Favorite



EARPHONE

- The sound volume of the earphone should be not too high so as not to injure your hearing.

 
Mobile Hard Disk & Data Download

Our device could be used as the Mobile Hard Disk: Connect USB cable into the corresponding jack, device will enter the picture of "PC Link (USB Disk)".

- Make sure the newest operation system of Microsoft is set up on the computer. So that the USB mobile device could be auto-identified.
- If the mobile device could not be identified, you can consult USB Driver Readme in the product's CD-ROM and set up the USB Driver.
- Allow USB 2.0 High Speed.

You can download the data from the website after seeing ©: Connect the device and PC by USB cable. The device will enter the picture of "PC Link (USB Disk)". The followings are ways to download.

- ① Install PC Service Home in product's CD ROM, and then download through the [Media Download].
- ② Download through Mobile Hard Discs Copy.
- ③ Please log-in our website to download On-line Service.
The files which are downloaded in the computer are named as [.exe]. Double tap these files and choose "Download to PDA". Details would be talked about in the user's guide.

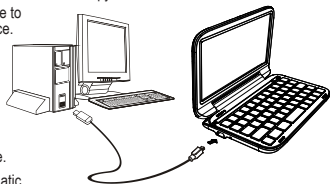

The device provides automatic searching function and allows user to create new folder for data. Parts of file formats must be identified for easy retrieval, so please put the download data under the following right way.

- \MULTI\TEXT\ Text Editor
- \STUDY\EXTRADIC\ Extension Dictionary
- \APPS\CALC\ Calculation



- Please do not remove the cable, close the PC Service Home program or turn off the power while synchronizing, they may cause system corruption and damage to your data.
- If you want to remove the cable, you can press **[Esc]** key on the device to disconnect safely.

Specification

LCM	4.3" WQVGA (480 * 272) TFT, 24 bit color
Battery	Lithium battery 3.7V/1270mAh
Adaptor	Input: 100-240V/50-60Hz Output: DC 5V/1A
Expansion Slot	MultiMedia/Secure Digital/Secure Digital High Capacity Card
USB Jack	USB 2.0 High Speed

Maintenance

- Keep it dry. Precipitation, humidity and liquid that contains minerals will corrode electronic circuits.
- Do not use or store it in dusty, dirty areas as its detachable parts may be damaged.
- Do not store it in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and melt certain plastics.
- Do not store it in cold areas. When the device warms up, moisture can form inside it, which may damage electronic circuit boards.
- Do not attempt to take the device apart. Improper handling may damage the device.
- Do not drop, knock or shake it. Improper handling may cause damage to the liquid crystal panel.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint it. Paint can clog the device's detachable parts and cause it to malfunction.
- Do not operate the device below the temperature 0 or over 40 degrees. Excessive heat or cold will cause malfunction and incur damage to the device. To avoid such from happening, please do not use the device for two hours after it has been exposed to excess heat or cold, because the humidity or moisture formed by the temperature changing will cause damage to the device.



We are obliged to charge user maintenance fee if the product is damaged due to liquid percolation, improper placement of the product (such as eroder by moths), or breakage on the screen (such as screen scratching or breaking) such man-made damages.